




## INSTALLATION FOR WHEEL COVERS – BOEING 737

### MAIN WHEEL COVERS:



- ✓ Open up wheel cover and drape it over the backside of the main wheels. (Figure 1)
- ✓ Pull the cover over the main wheels from back to front. (Figure 2)
- ✓ Line up the Velcro on the front side of the main wheels and attach Velcro together. (Figure 3)
- ✓ Main wheel cover should be completely installed to main wheels and Velcro attached. (Figure 4)
- ✓ CAUTION: Watch out for hydraulic lines and hardware during install/removal and DO NOT damage.
- ✓ Upon removal, inspect wheels.

### NOSE WHEEL COVER:

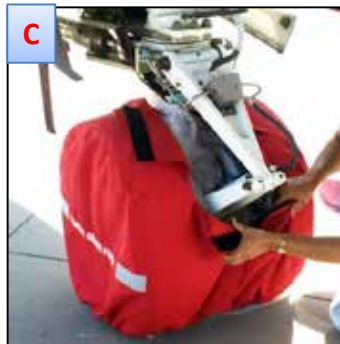

- ✓ Open up wheel cover and attach to the front side of the nose wheel. (Figure A)
- ✓ Pull the cover over the nose wheel from front to back. (Figure B)
- ✓ Line up the Velcro on the backside of the nose wheel and attach Velcro together. (Figure C)
- ✓ Nose wheel cover should be completely installed to the nose wheel and Velcro attached. (Figure D)
- ✓ CAUTION: Watch out for hydraulic lines and hardware during install/removal and DO NOT damage.
- ✓ Upon removal, inspect wheels.